SHARP®

COLOUR TELEVISION

MODEL

21HS-50H

■ OPERATION MANUAL ■

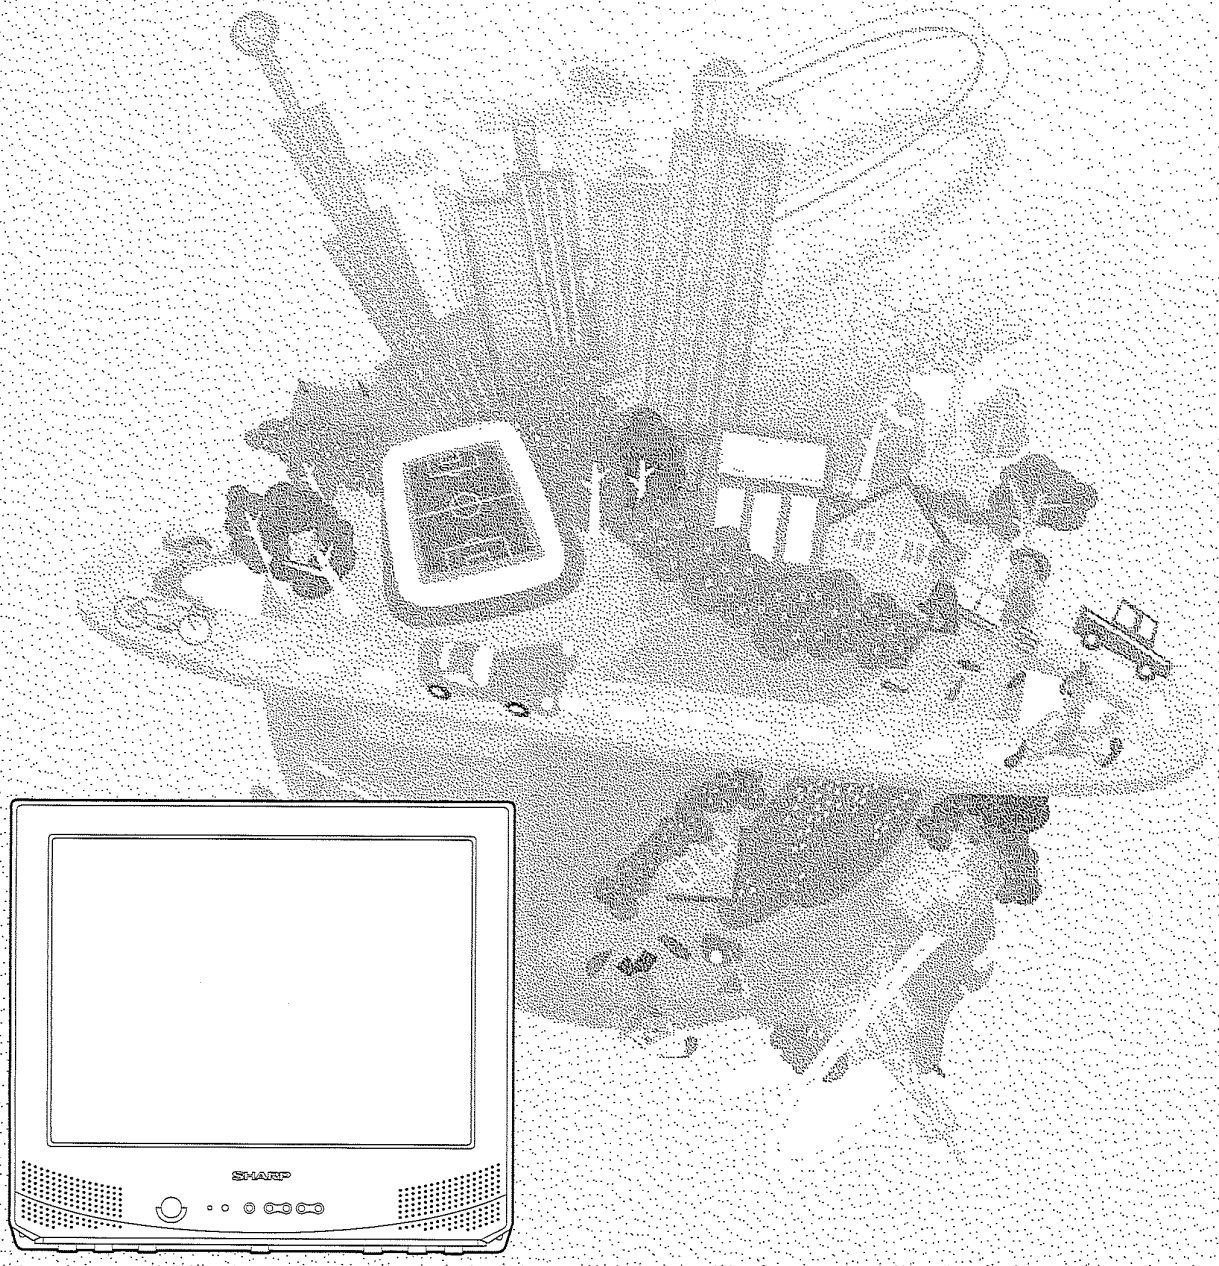

PRINTED ON ENVIROMENTALY FRIENDLY PAPER

Safety Precautions

This equipment complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

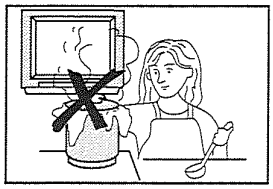

To prevent fire or electrical shock, do not use the TV set in an excessively damp place.

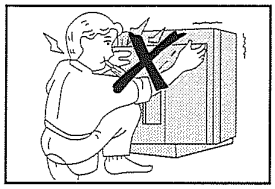

Never remove the back of the cabinet, as there is high voltage inside the TV set. Please call for service.

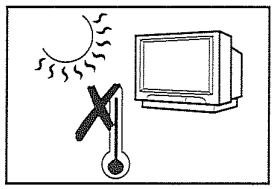

Position the TV set out of direct sunlight and away from heat, as high temperatures can damage the cabinet, CRT, or other electronic parts.

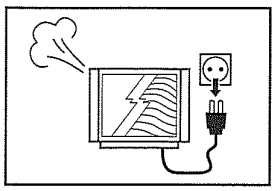

Unplug the power cord from the wall outlet immediately if the TV set begins to make unusual noises or gives off smoke or an odd smell, then call your dealer for service.

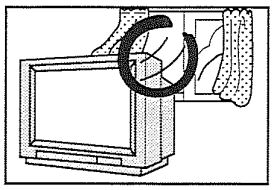

Do not cover the ventilation holes at the back of the TV set, this can cause fire or other serious problems. Leave an adequate open space behind the TV set for good ventilation.

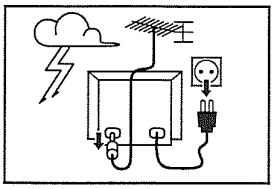

Even if your television is switched off, it can still be damaged by lightning striking the mains and/or aerial cables. For this reason, you should always disconnect your television from the mains and the aerial cable during thunderstorms.

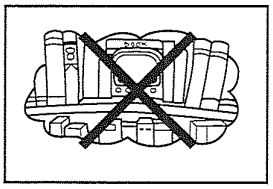

Do not install this equipment in a confined space, such as a bookcase or built-in cabinet.

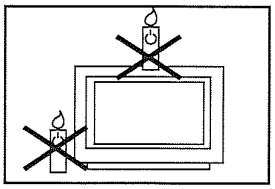

To prevent fire, never place any type of candle or naked flames on the top or near the TV set.

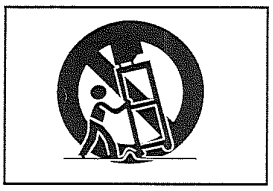

Television equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

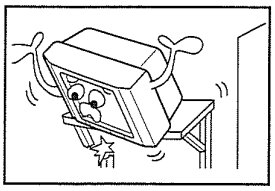

Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.

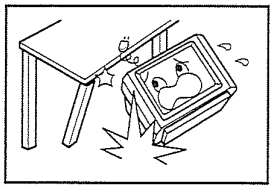

Do not place this television equipment on an unstable cart, stand, or table. The television equipment may fall, causing serious injury to a child or an adult, and serious damage to the equipment.
Use only with a cart or stand recommended by the manufacturer, or sold with the television equipment.

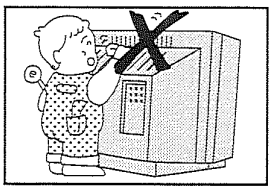

Never insert or drop any metallic or inflammable objects into the venitilation holes of the TV set. This can cause fire, electrical shock or electrical failure. Do not place a flower vase or anything else containing liquid on the TV set, as liquid spilt on the TV set can cause serious problems.

CAUTION: Make sure that the main power is switched off when going out.

Contents

General Information
- Terms of guarantee 1
- Safety Precautions 2
- Accessories 3
- Remote Control Battery Installation 3

Installing your TV
- Aerial Connecitons 4
- Typical Connections 4
- Location of Controls 5

Channel Setting
- Auto Tuning 6
- Manual Tuning 7
- Fine Tuning 9
- Skipping programmes 10
- Manual Channel Sorting .. 12
- Channel Sorting 13

Basic Operation
- Watching a TV programme .. 14

Useful Features
- Picture Adjustment 15
- Sound Adjustment 16
- Timer Setting 17
- Child Lock 19

Other Functions
- Flashback & Sound Mute ... 22
- TV/VIDEO & Call buttons ... 23
- NICAM Broadcasts 24
- Teletext 25

Reference
- Troubleshooting 28
- Calling for Service 29
- Specifications 29

Dear SHARP Customer

Congratulations! You are now the proud owner of a SHARP Colour Television Receiver. To ensure proper operation, please read this manual carefully. After reading, keep this manual in a safe place for future reference.

Accessories

		
Remote control	Size-AA Dry batteries	Operation Manual

Remote Control Battery Installation

Before using the TV set for the first time, install the supplied dry batteries in the remote control.

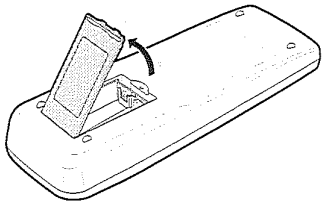

❶ With your thumbnail, pull up the slit as indicated by the arrow to remove the battery cover.

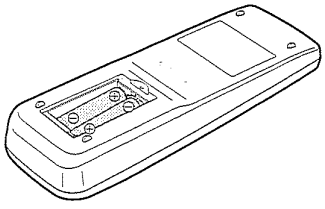

❷ Insert two batteries 1.5 V (size "AA"). Be sure to match the battery ⊕/⊖ terminals with the ⊕/⊖ marks inside the compartment.

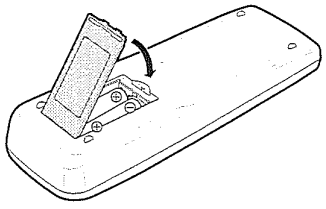

❸ Replace the battery cover.

NOTE

- Remove batteries if weak or if the unit is not in use for long periods.
- Do not mix old and new batteries.
- Incorrect installation of the batteries may damage the remote control.

Aerial Connections

- To enjoy a clearer picture, we recommend that you use an outdoor aerial lead. The following is a brief explanation of the types of connection that are used for coaxial:

Aerial Lead: Connect the cable from the aerial to a standard DIN45325 plug (IEC169-2) and plug it into the aerial terminal at the back of the TV set.

75-ohm coaxial cable (round cable)

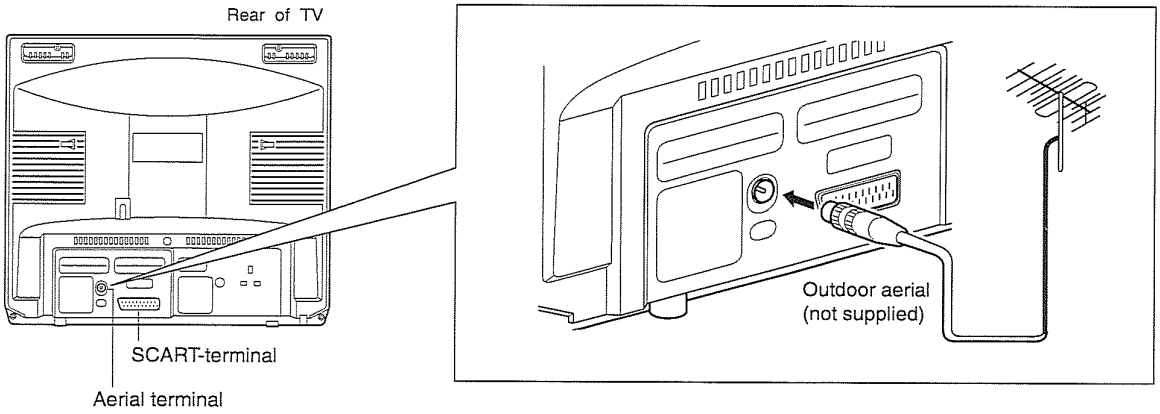

Typical Connections

Enjoy the stunning visuals of a VCR or DECODER by connecting them to this TV set through its Euro-SCART 21-Pin terminal.
Please refer to the Operation Manual of your VCR for details.

Typical connection (VCR and TV) through the RF terminal

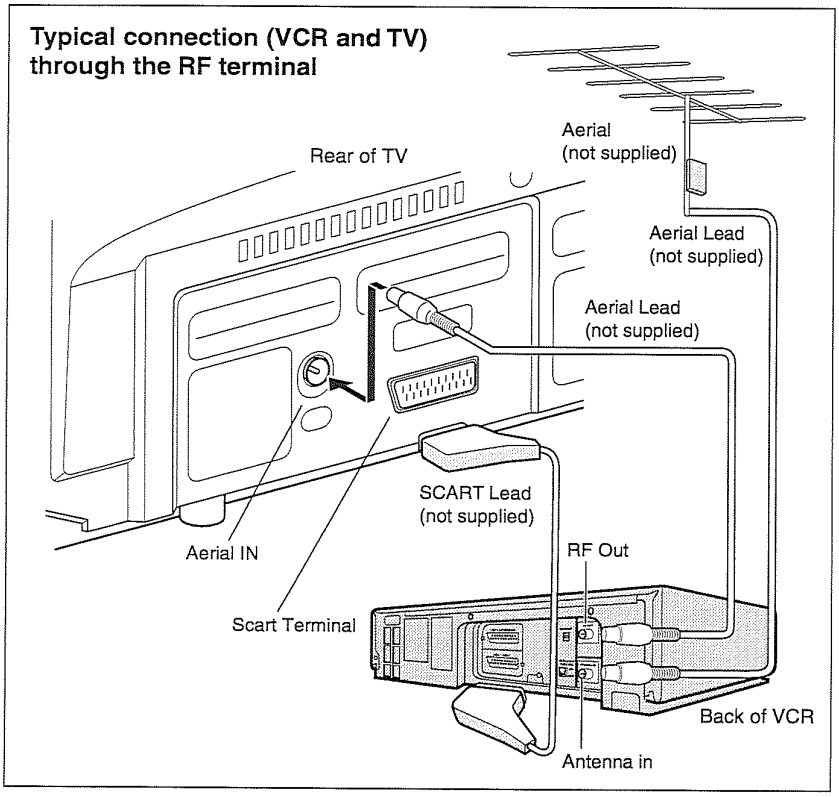

Location of Controls

Remote Control

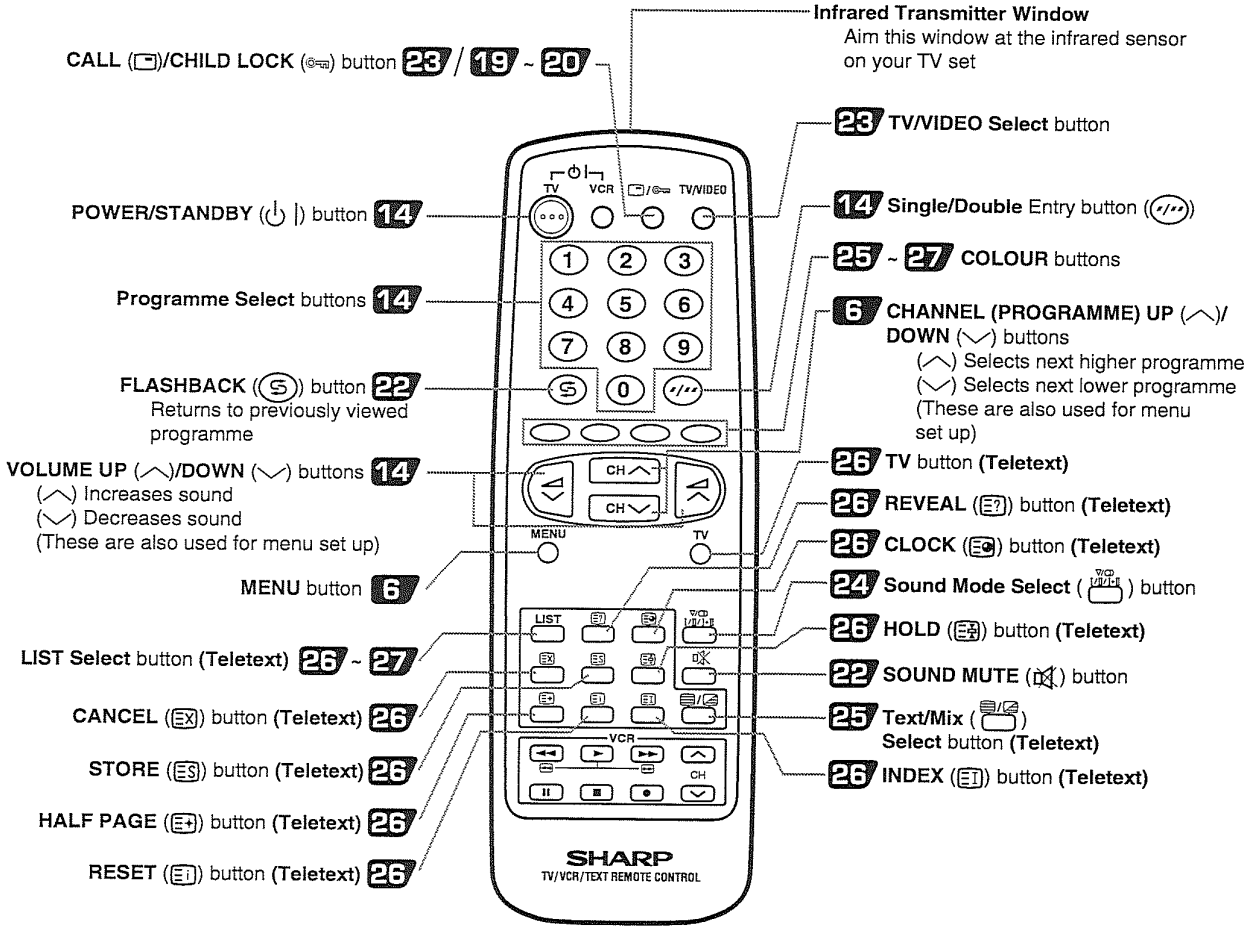

TV Front

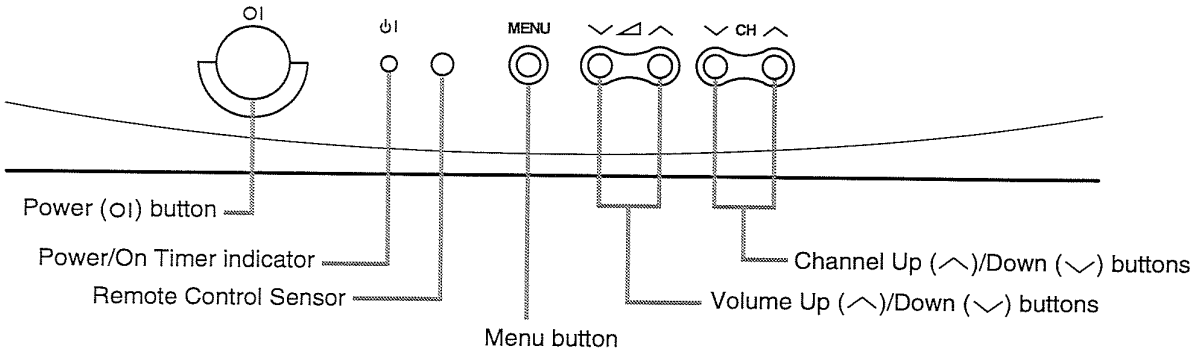

Channel Setting

This function will automatically tune all local channels for you.
The following steps are carried out using the remote control.

Auto Tuning

Automatically tunes in and presets receivable TV stations

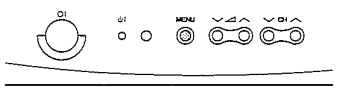

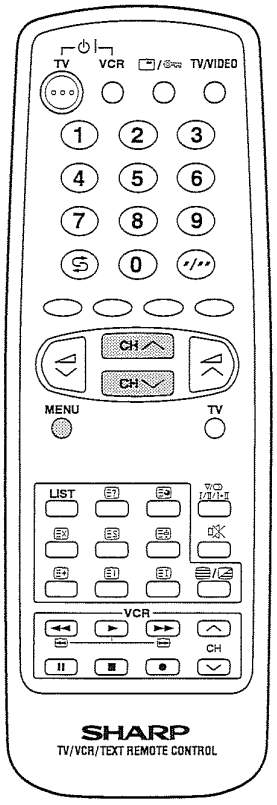

1 The AUTO TUNING screen will appear by holding down MENU on the TV for **more than 2 seconds**.

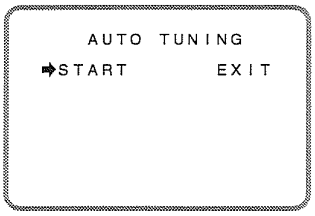

2 AUTO TUNING will start when selecting "START", using CH and CH and pressing MENU on the remote control, or pressing MENU on the TV.

All the TV stations in your area that can be received by the TV set are automatically preset between programme position 1 to 99.

The screen shows whatever is on programme position 1 when full auto channel preset is finished.

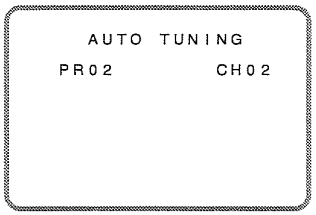

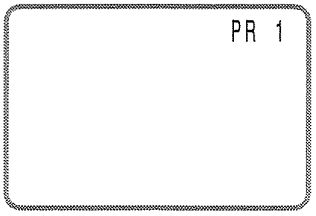

NOTE

- To stop AUTO TUNING, **press** MENU on the remote control.
- When AUTO TUNING is not done, **select** EXIT by using CH and CH on the remote control or **press** MENU on the TV to return to the TV screen.

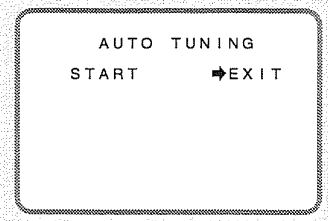

- Make sure to start AUTO TUNING after connecting the antenna, as the AUTO TUNING screen will be displayed when the power is turned on for the first time.
- Make sure to execute AUTO TUNING until tuning is complete. When EXIT has been selected during tuning or when the power has been turned off and then turned on again, the AUTO TUNING screen will be displayed.
- When the Child Lock is set, it is not possible to enter the Tuning mode. This is to make sure that Child Lock is not over-ridden by re-tuning the set. (To cancel Child Lock please refer to page 21.)

Channel Setting (Continued)

This section describes how to tune your TV manually and to store channels in the order you prefer. The following steps are carried out using the remote control.

Manual Tuning

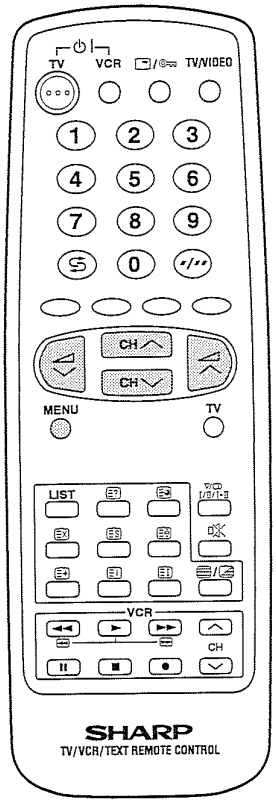

Setting a TV station to a desired programme position

1 **Press** MENU to call the MAIN menu screen.

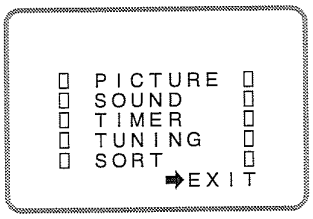

2 **Press** CH∧ or CH∨ to select "TUNING", and **press** MENU.

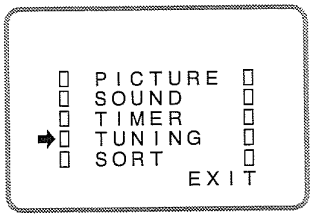

3 **Press** CH∧ or CH∨ to select the "PR" position, and select the programme number (1–99) with ∧ or ∨.

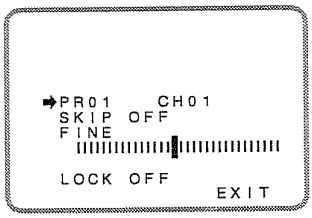

4 **Press** CH∧ or CH∨ to select "CH", and directly select the channel number if known, using ∧ or ∨.

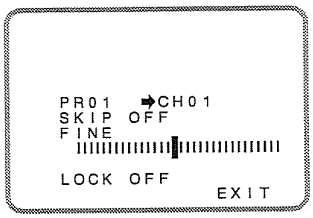

5 **Repeat** steps 3 and 4 if you wish to set other channels.

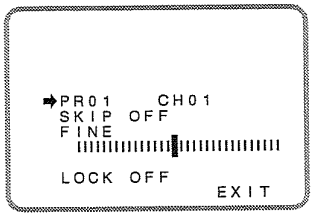

Channel Setting (Continued)

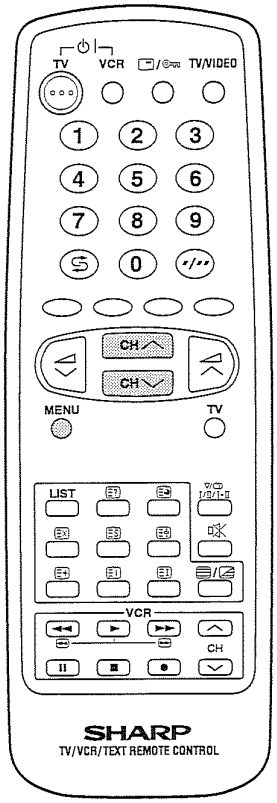

6 **Press** CH ^ or CH v to select "EXIT", and **press** MENU to return to the normal screen.

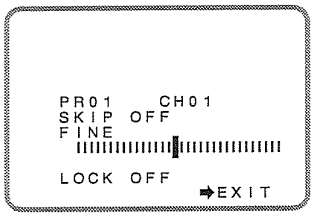

NOTE

If there is no sound and the key mark (O-n) is displayed after setting the channels, the Child Lock Mode has been activated. To cancel the settings, make sure to set key mark (O-n) to OFF.

Channel Setting (Continued)

Fine Tuning

This function lets you easily fine-tune the TV set to improve reception and picture quality.

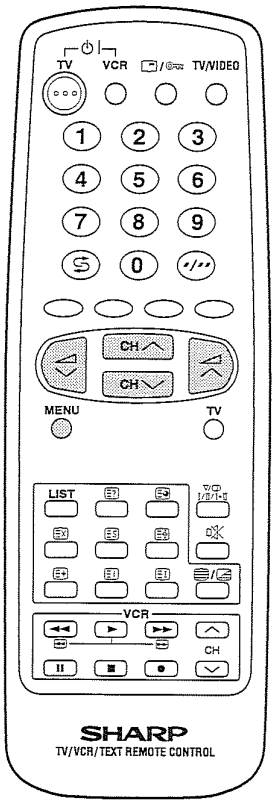

1 **Press** MENU to call the MAIN menu screen.

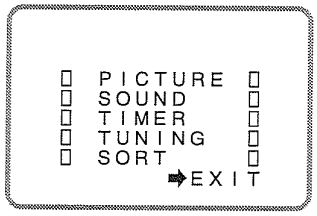

2 **Press** CH ∧ or CH ∨ to select "TUNING", and **press** MENU.

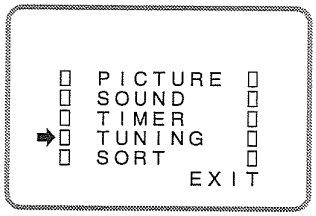

3 **Press** CH ∧ or CH ∨ to select the "FINE" position.

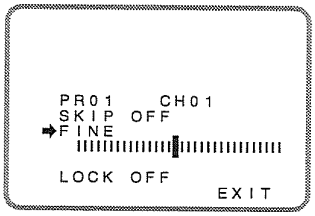

4 **Press** and **hold** VOL ∧ or VOL ∨ until the best tuning position is found.

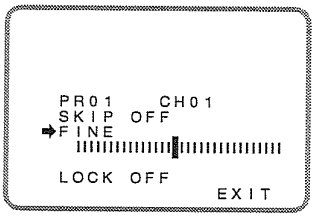

5 **Press** CH ∧ or CH ∨ to select "EXIT", and **press** MENU to return to the normal screen.

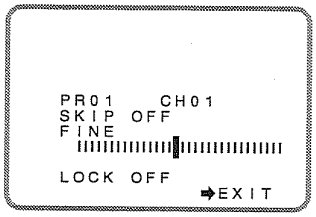

Channel Setting (Continued)

Skipping Programmes

This function lets you skip vacant channels or channels that you never watch when you select channels with CH∧ or CH∨.

Setting Skip

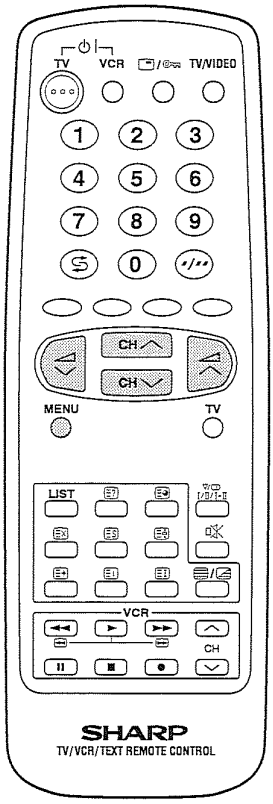

1 Press MENU to call the MAIN menu screen.

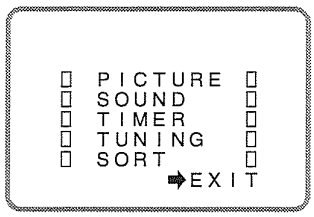

2 Press CH∧ or CH∨ to select "TUNING", and press MENU.

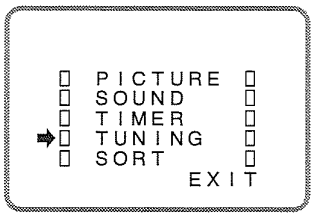

3 Press CH∧ or CH∨ to select the "PR" position, and select the programme number (1–99) you wish to skip with ≫ or ≪.

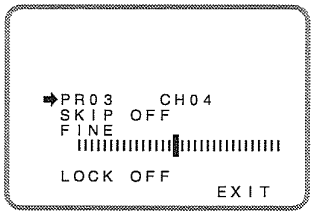

4 Press CH∧ or CH∨ to select "SKIP", and press MENU to select "SKIP ON".
The programme number will turn from white to red.

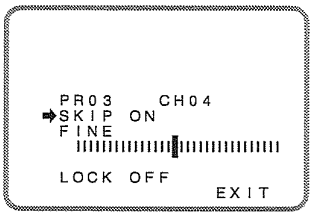

5 Repeat steps 3 and 4 if you wish to skip other programmes.

6 Press CH∧ or CH∨ to select "EXIT", and press MENU to return to the normal screen.

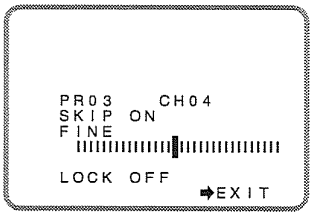

Channel Setting (Continued)

Cancelling Skip

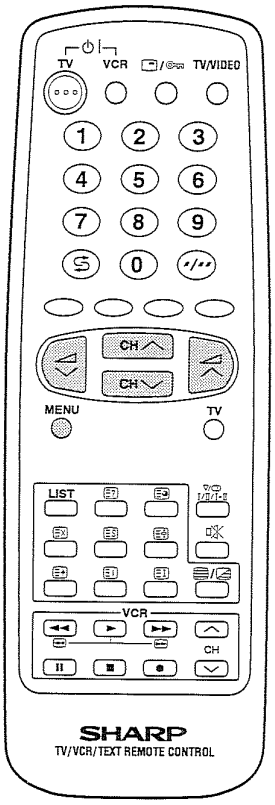

1 **Press** MENU to call the MAIN menu screen.

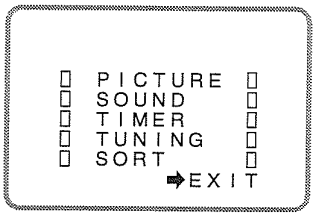

2 **Press** CH ^ or CH v to select "TUNING", and **press** MENU .

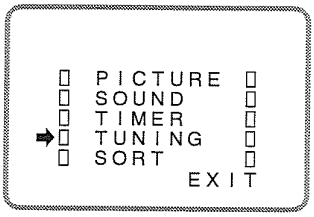

3 **Press** CH ^ or CH v to select the "PR" position, and **select** the programme number (1–99) for which you wish to cancel skip with ◁ or ▷.
Select a skipped programme number displayed in red.

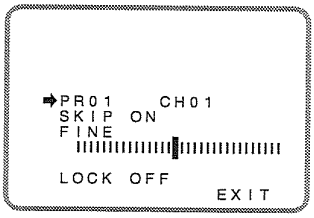

4 **Press** CH ^ or CH v to select "SKIP", and **press** MENU to select the "SKIP OFF".
The displayed programme number will turn from red to white.

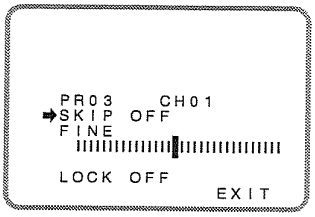

5 Repeat steps 3 and 4 if you wish to cancel skip other programmes.

6 **Press** CH ^ or CH v to select "EXIT", and **press** MENU to return to the normal screen.

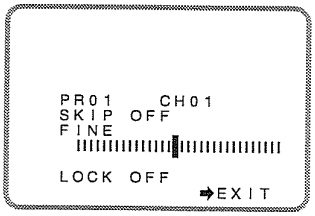

Channel Setting (Continued)

Manual Channel Sorting

When moving channel 20 from pre-set channel 12 to pre-set channel 30, follow the steps below:

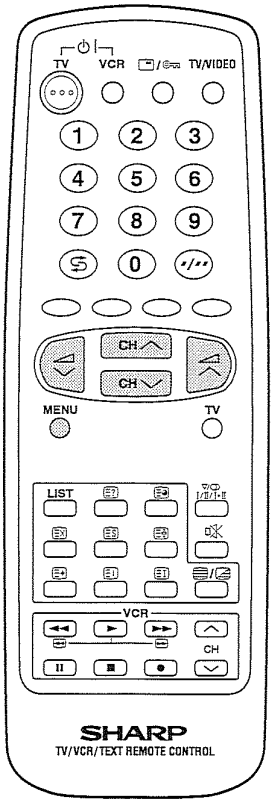

1 **Press** MENU ◯ to call the MAIN menu screen.
Using CH∧ or CH∨, and **select** "SORT" by pressing MENU ◯.

```
  PICTURE
  SOUND
  TIMER
  TUNING
➡ SORT
      EXIT
```

2 **Select** channel 20 of the preset channel 12 using CH∧ or CH∨ and ◁ or ▷ and set it by pressing MENU ◯.

```
SORT                    1/6
1CH 2   7CH10  13CH70
2CH 3   8CH12  14CH71
3CH19   9CH13  15CC  1
4CH 5  10CH16  16CC  2
5CH 8  11CH17  17CC  3
6CH 9  12CH20  18CC  4
                EXIT
```

3 **Move** the cursor to "MOVE" using CH∧ or CH∨ and ▷ or ◁ and **select** it by pressing MENU ◯.

```
SORT                    1/6
1CH 2   7CH10  13CH70
2CH 3   8CH12  14CH71
3CH19   9CH13  15CC  1
4CH 5  10CH16  16CC  2
5CH 8  11CH17  17CC  3
6CH 9  12CH20  18CC  4
SELECTED:CH 20
MOVE        DELETE
              EXIT
```

4 Using CH∧ or CH∨ and ▷ or ◁ **move** to the next screen and **select** preset channel 30.

```
SORT                    2/6
19CC09  25CC14  31CC44
20CC10  26CC18  32CC45
21CC11  27CC19  33CC46
22CC12  28CC21  34CC47
23CC13  29CC23  35CC48
24CH 6  30CC43  36CC50
                EXIT
```

5 Pressing MENU ◯ will insert channel 20 in the preset channel 30 field. Preset channels over pre-set channel 31 will be automatically sorted.

```
SORT                    2/6
19CC10  25CC18  31CC44
20CC11  26CC19  32CC45
21CC12  27CC21  33CC46
22CC13  28CC23  34CC47
23CC 6  29CC43  35CC48
24CH14  30CH20  36CC50
                EXIT
```

6 **Select** "EXIT" using CH∧ or CH∨ and ▷ or ◁ and **press** MENU ◯ to return to the TV Screen.

```
SORT                    2/6
19CC10  25CC18  31CC44
20CC11  26CC19  32CC45
21CC12  27CC21  33CC46
22CC13  28CC23  34CC47
23CC 6  29CC43  35CC48
24CH14  30CC20  36CC50
                EXIT
```

Channel Setting (Continued)

Channel Sorting (Delete)

When deleting channel 13 from the preset channel 9, follow the steps below:

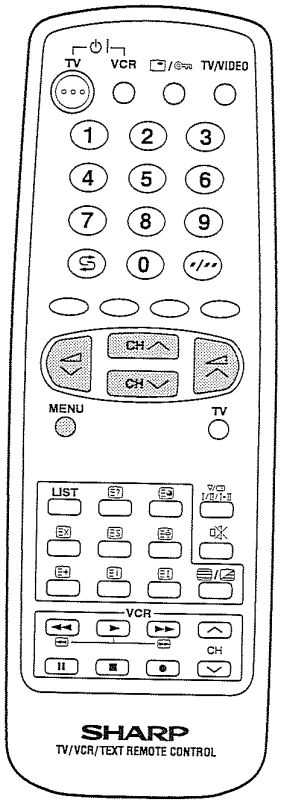

1 **Press** MENU to call the MAIN menu screen.
Using CH∧ or CH∨, and **select** "SORT" by pressing MENU.

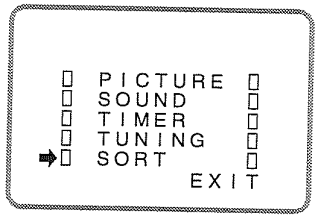

2 **Select** channel 13 in the preset channel 9 field using CH∧ or CH∨ and ◁ or ▷ and set it by pressing MENU.

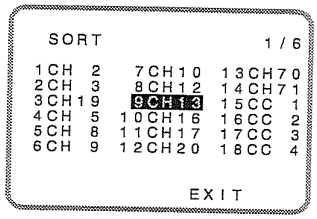

3 Using CH∧ or CH∨ and ▷ or ◁ **select** "DELETE" and **press** MENU.

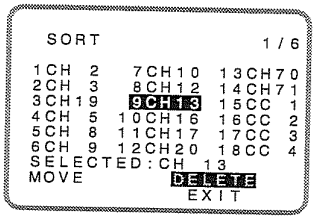

4 Pressing MENU will delete channel 13 in the preset channel 9 field and replace it by channel 16.

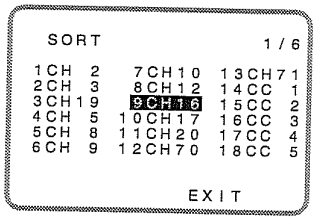

5 **Select** "EXIT" using CH∧ or CH∨ and ▷ or ◁, and **press** MENU to return to the TV Screen.

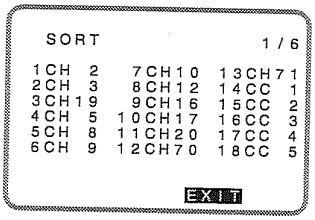

Basic Operation

Watching a TV Programme

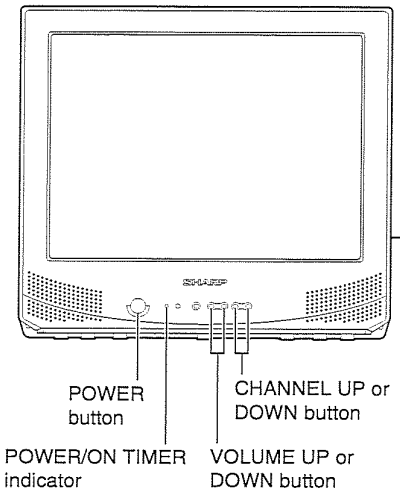

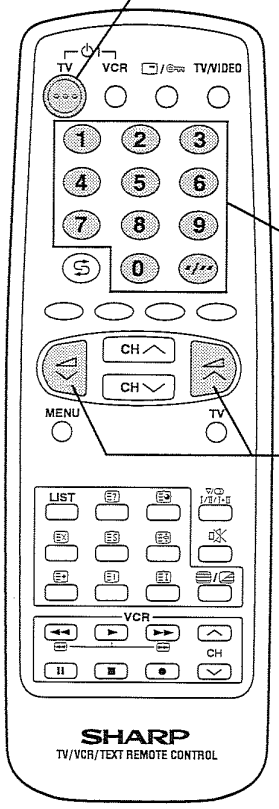

Preparation ▶ Turning on the power on the TV set.

Press ⏻.

If a picture appears on the screen, go to step 2.
If a picture does not appear on the screen, go to step 1.

1 Turning on the power

Press TV.

A picture appears on the screen.

2 Selecting the programmes

Example:
When selecting programme position 5

5

When selecting programme position 23

-/-- → 2 → 3



3 Adjusting the volume



Decreases the volume

Increases the volume

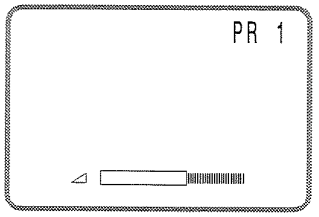

NOTE

If you go away on a trip or will not be at home for a considerable length of time, as a safety precaution, please unplug the cord from the outlet.

Picture Adjustment

Adjusting the Picture

Picture quality (CONTRAST, COLOUR, BRIGHTNESS, SHARPNESS) are adjustable in this menu.

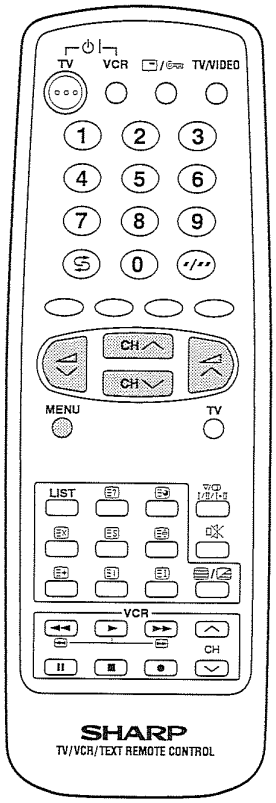

1 **Press** MENU ◎ to call the MAIN menu screen.

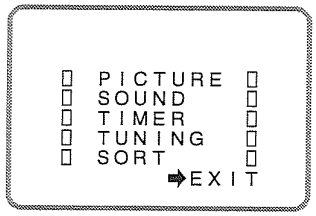

2 **Press** CH ^ or CH v to select "PICTURE", and **press** MENU ◎.

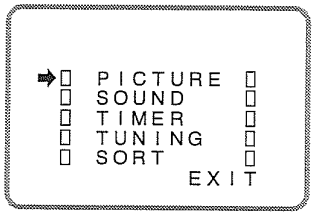

3 **Press** CH ^ or CH v to select the items to adjust.

Selected item	
◑	CONTRAST
◕	COLOUR
☼	BRIGHTNESS
◫	SHARPNESS
TINT	TINT
N	NORMAL

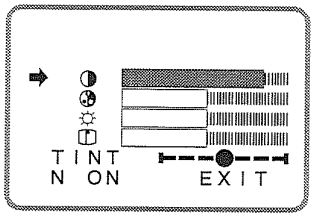

4 Adjust the picture quality to your liking with ◁ or ▷.

5 **Repeat** steps 3 and 4 above to adjust other items.

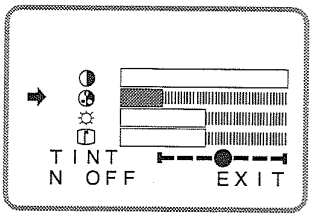

6 By selecting "N" you can reset the picture parameters to the factory setting.
Press MENU ◎ to restore the factory setting "N ON" mode.

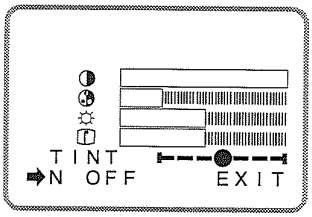

7 You can clear the on-screen display by selecting "EXIT" using CH ^ or CH v, and **press** MENU ◎.

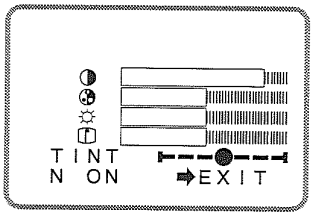

Sound Adjustment

Adjusting the Sound

Sound quality (TREBLE, BASS, BALANCE) are adjustable in this menu.

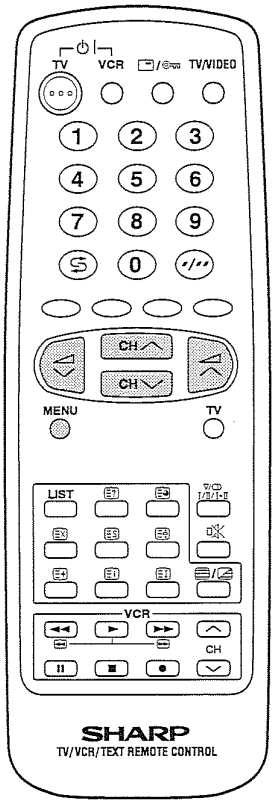

1 **Press** MENU to call the MAIN menu screen.

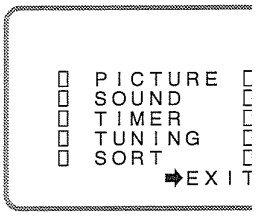

2 **Press** CH ∧ or CH ∨ to select "SOUND", and **press** MENU.

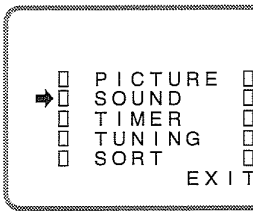

3 **Press** CH ∧ or CH ∨ to select the items to adjust.

Selected item	
𝄞	TREBLE
𝄢	BASS
⊿	BARANCE
N	NORMAL

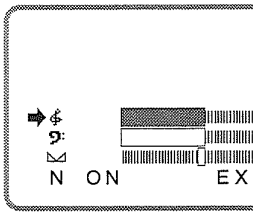

4 Adjust the sound quality to your liking with ∧ or ∨.

5 **Repeat** steps 3 and 4 above to adjust other items.

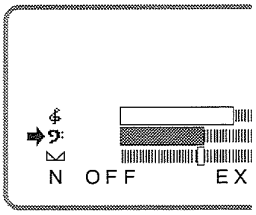

6 By selecting "N" you can reset the sound parameters to the factory setting.
Press MENU to restore the factory setting "N ON" mode.

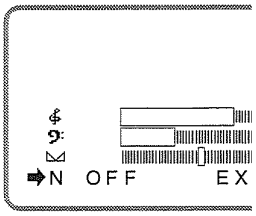

7 You can clear the on-screen display by selecting "EXIT" using CH ∧ or CH ∨, and **press** MENU.

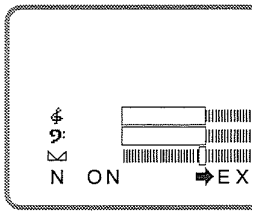

Timer Setting

ON Timer

Automatically turns the power ON after the set time has passed.

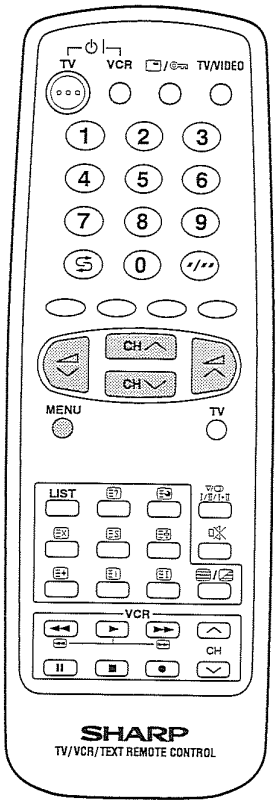

1 Press MENU to call the MAIN menu screen.

2 Press CH ^ or CH v to select "TIMER", and press MENU.

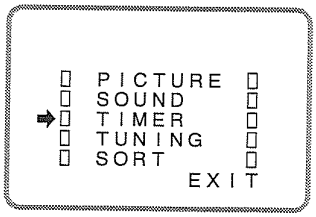

3 Press CH ^ or CH v to select "⏎ON" mode.

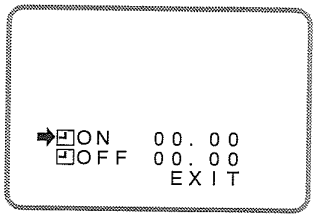

4 Press ^ or v to set the time. (from 10 min. to 12 hour 50 min., in 10 min. increments)

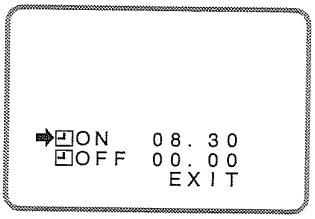

5 Press TV to set the TV into Standby mode. The Power/On Timer indicator flashes red. When the preset time (in the above example, 8 hours and 30 minutes) has passed, the power turns ON.

NOTE

- In order to know when the ON Timer programme has been run properly, when the TV is in the standby mode, the ON Timer indicator remains flashing in red.
- As a safety precaution, in case nobody is at home when the television switches on automatically, the television will disconnect itself automatically within 120 minutes; any button of the remote control functions should be pressed, if it is to remain ON.
- In the event of a power cut, disconnection from the plug, or the television is switched off at the mains switch, all the data in the ON Timer will be cancelled.
- The TIMER settings will remain if you exit the TIMER setting screen after setup.

Timer Setting (Continued)

OFF Timer

Automatically turns the power OFF after the set time has passed.

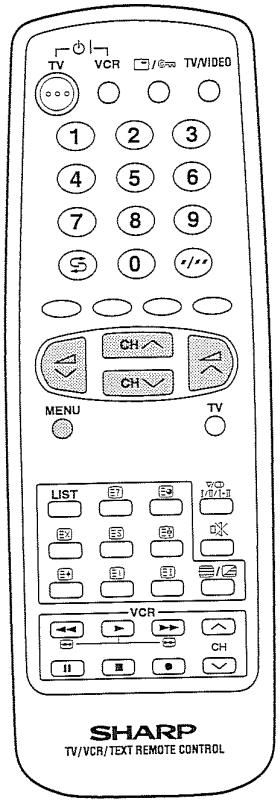

1 **Press** MENU to call the MAIN menu screen.

2 **Press** CH ^ or CH v to select "TIMER", and **press** MENU.

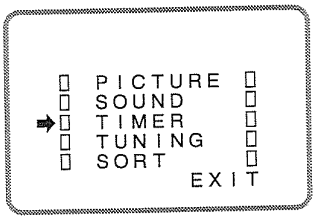

3 **Press** CH ^ or CH v to select "OFF" mode.

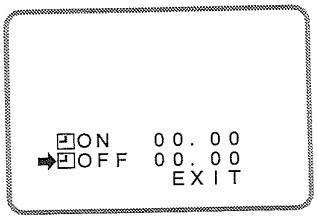

4 **Press** ^ or v to set the time. (from 10 min. to 12 hour 50 min., in 10 min. increments)
The timer starts to count down.

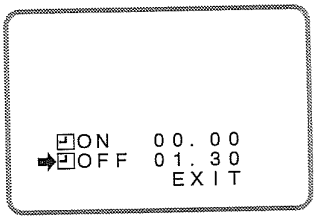

5 After setting the time, **select** "EXIT" by pressing CH ^ or CH v and **press** MENU.
When the preset time (in the above example, 1 hour and 30 minutes) has passed, the TV set turns to Standby mode.

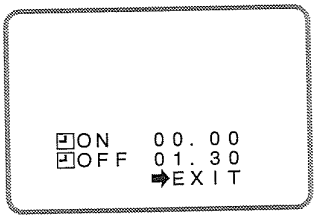

NOTE

- In the event of a power cut, disconnection from the plug, or the television is switched off at the mains switch, all the data on the OFF Timer will be cancelled.
- The TIMER settings will remain if you exit the TIMER setting screen using EXIT after setup.

Child Lock (Channel Block)

You can lock a TV channel to prevent unsupervised TV viewing by following these procedures:

Setting Child Lock

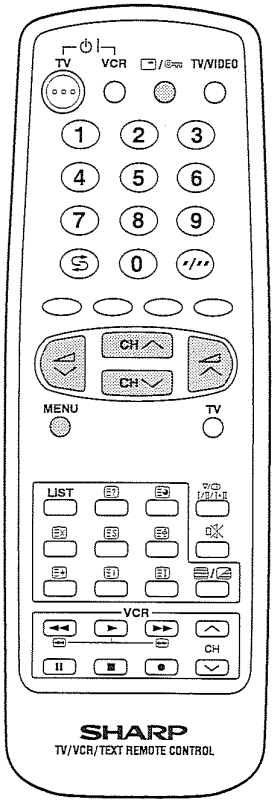

1 **Press** MENU ◯ to call the MAIN menu screen.

2 **Press** CH ^ or CH v to select "TUNING" and **press** MENU ◯.

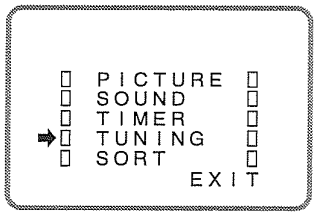

3 **Select** the programme you want to lock using ⏩ or ⏪. (You can also select the programme using the 0~9 digit buttons.)

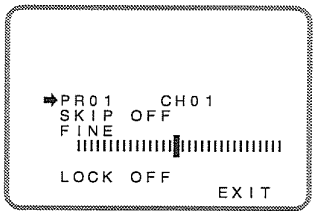

4 **Press** CH ^ or CH v to select "LOCK ON", then **press** MENU ◯. The channel is now locked.

5 **Repeat** steps 3 and 4 if you wish to lock other programmes.

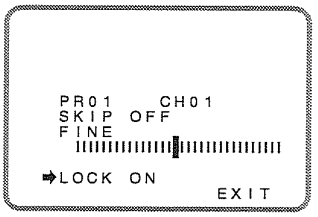

6 **Press** CH ^ or CH v to select "EXIT" and **press** MENU ◯.

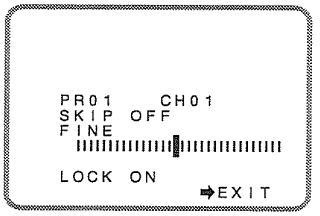

NOTE

You can also block the SCART connection.

⚠ CAUTION

- When you select a locked channel, the TV picture will be blue and the mark "O-" appears on the screen.
- **Press** ⏎ ◯ to unlock the channel.
- Since the remote control is the "Key" to unlock TV channel you must remember not to let the remote control out of your supervision.

Child Lock (Continued)

Opening Child Lock

Watching a programme position set with the Child Lock.

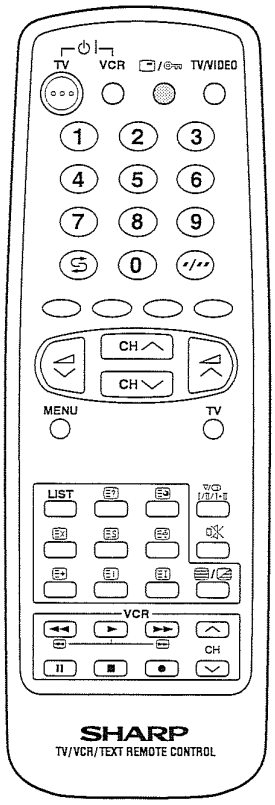

1 **Select** the child lock programme position.

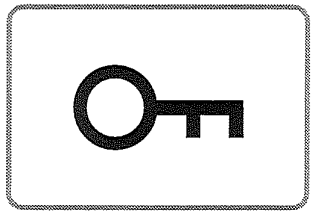

2 **Hold down** ⊙ for more than 2 seconds.
The screen of the child locked programme is displayed.

Child Lock (Continued)

Cancelling Child Lock

Releasing the Child Locked programme.

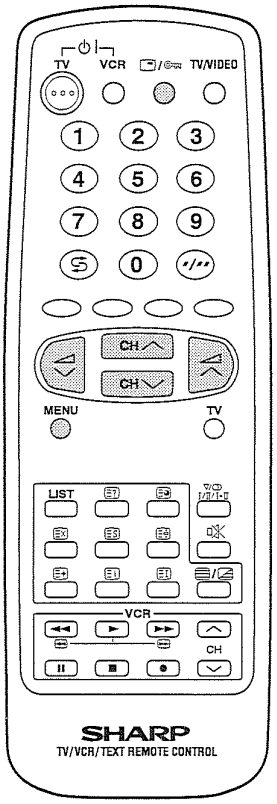

1 **Select** the child lock programme position.

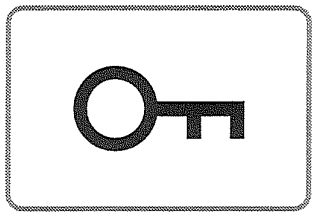

2 **Press** MENU to call the MAIN menu.

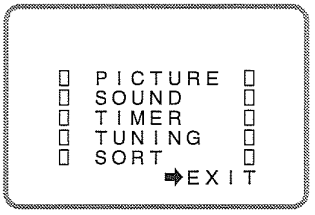

3 **Press** CH ^ or CH v to select "TUNING" and **press** MENU.

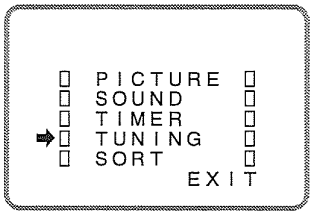

4 When the Child Lock symbol re-appears on the screen, **press** and **hold down** for four seconds to enter Fine Tuning menu.

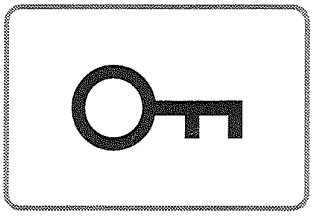

5 Tuning screen is displayed. **Press** CH ^ or CH v to select "LOCK OFF" and **press** MENU.

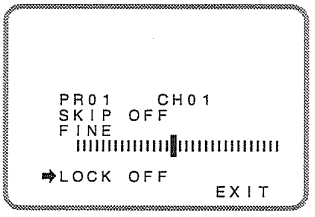

6 If you wish to unlock other locked programmes, **choose** the locked programme position, and then **repeat** step 5.

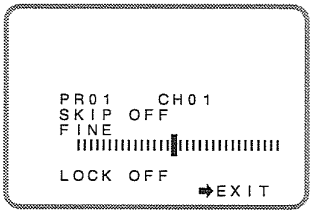

7 **Press** ^ or v to select "EXIT" and **press** MENU.

Other Functions

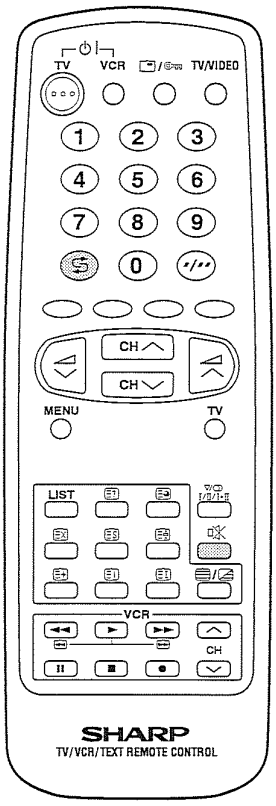

Flashback

Switches back to the channel you were watching just before the current programme.

Press (S).
The channel previously viewed returns to the screen.

Example:
If (S) is pressed, after switching from channel 5 to channel 7, the programme will change to programme 5.
Press (S) again to return to programme 7.

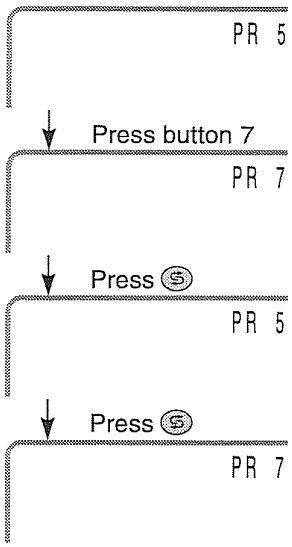

Sound Mute

Silences the sound.

1. **Press** 🔇.
The symbol "🔇" appears on the screen, and the sound is silenced.

2. **Press** 🔇 again.
The volume is turned on again.

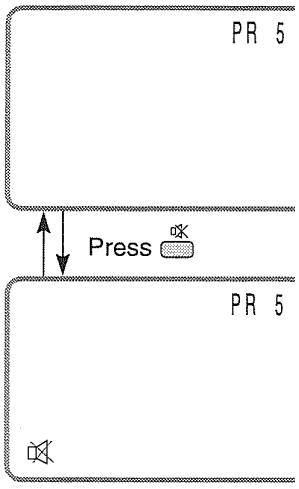

Other Functions (Continued)

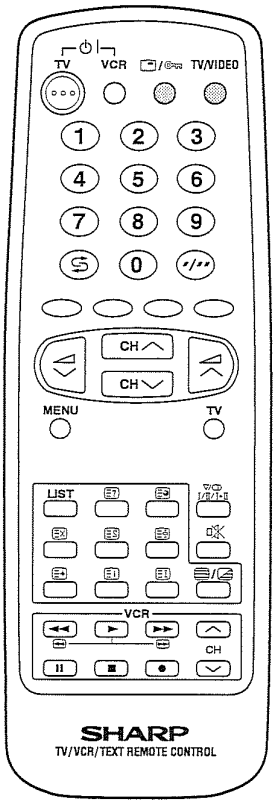

TV/VIDEO

Switches between TV broadcasts and AV input programmes.

Each time you **press** TV/VIDEO ◎ , the input toggles between SCART and TV programmes.

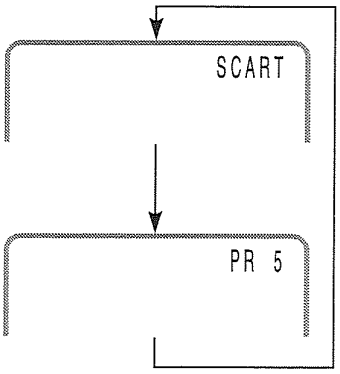

Call

Displays the current programme number, the timer and other settings on the screen.

1 **Press** ⊡/⊶ ◎.
The time remaining on the ON Timer, OFF Timer and Programme number will appear on the screen. (When no Timer is set, nothing appears on the screen).

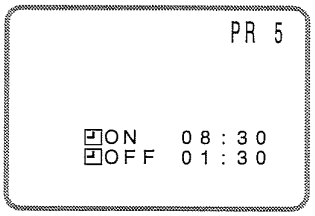

2 **Press** ⊡/⊶ ◎ once again.
The programme number, ON Timer and OFF Timer display disappears from the screen. The screen returns to the normal screen.

NICAM Broadcasts

Enables selection of reception mode when receiving a NICAM signal.

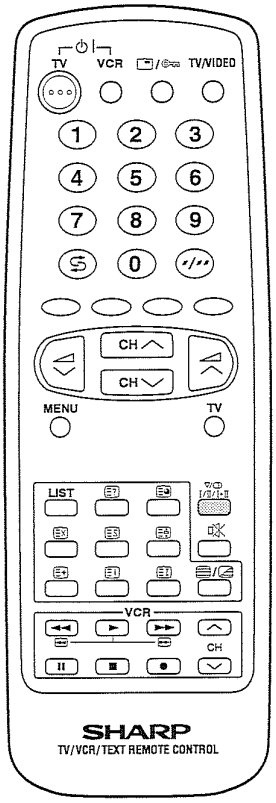

Stereo

Each time you **press** , the mode switches between STEREO and MONO (monaural sound).

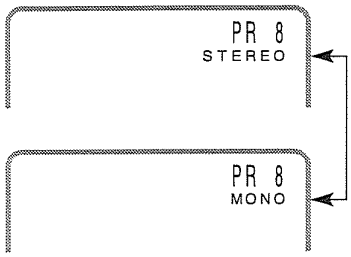

Bilingual

Each time you **press** , the mode switches between DUAL CHANNEL AB, DUAL CHANNEL A and mono DUAL CHANNEL B.

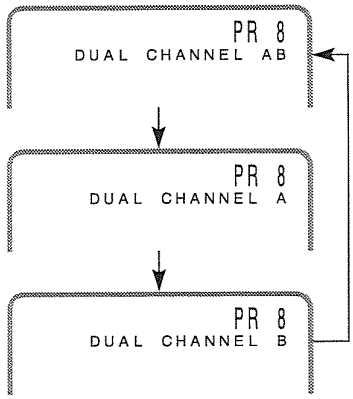

Monaural

Each time you **press** , the mode switches between NICAM MONO and MONO (monaural sound).

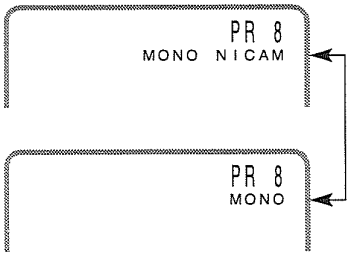

Teletext Mode

Teletext is an information service, organised like a magazine, provided by some television stations in addition to regular television broadcasting.

Basic Operation

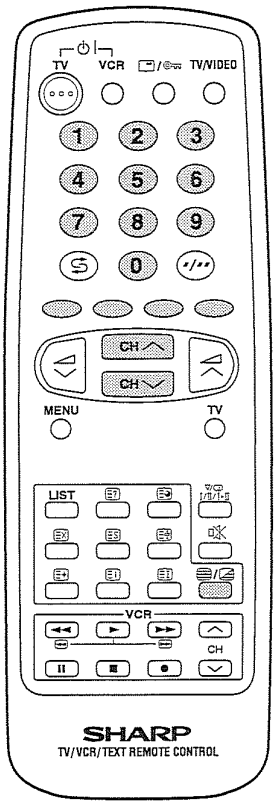

To switch ON, select a page number and switch OFF the Teletext.

1. **Select** a TV channel, which is broadcasting the Teletext programme you would like to watch.
2. **Press** to select the TELETEXT Mode.
3. **Enter** three digits using the 0~9 digit buttons to select a page number.
   (The CHANNEL buttons CH∧/CH∨ can also be used.)
4. **Press** to superimpose a Teletext broadcast onto the current TV programme screen (MIXED Mode).
5. **Press** to go out from the TELETEXT Mode.

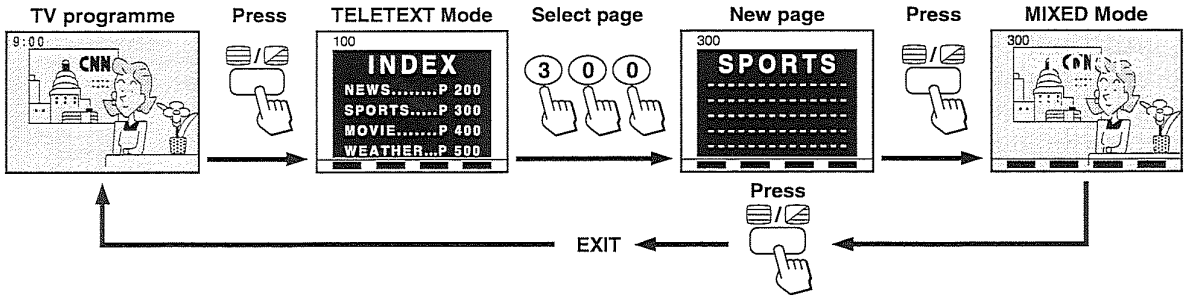

Fast Page Selection

1. **Select** a TV channel, which is broadcasting the Teletext programme you would like to watch.
2. **Press** to select the TELETEXT Mode.
3. To recall a page number displayed in the coloured brackets, simply **press** the corresponding coloured button.

Teletext Mode (Continued)

Other Teletext Features

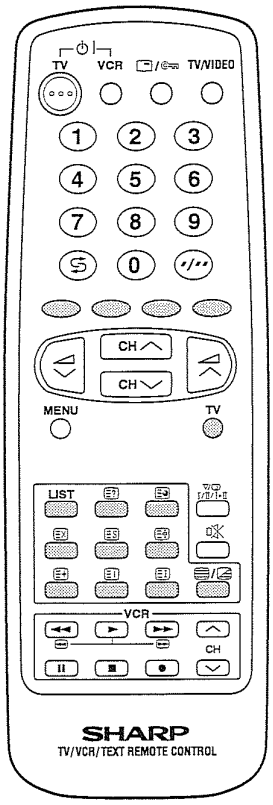

HALF PAGE button:

Press to magnify, the upper/lower half of the Teletext page.

REVEAL button:

Press to reveal or hide information such as the answer to a quiz.

RESET button:



Press to return to TV mode.

LIST Select button:

Press to change the system:
FLOF ↔ LIST [❶].

TV button:

Press to return to TV mode.

HOLD button:



Press to hold or cancel the hold on the current page.

INDEX button:



Press to return back to index page.

STORE button:



Press to store in the memory the page numbers in the LIST mode [❶].

COLOUR buttons:

To recall a page displayed in the coloured brackets, **press** the corresponding coloured button.

[❶] More information on - How to Operate Page Memory - (page 27).

CLOCK button:

In TV Mode: Pressing this button when the TEXT data is received, the real time information will appear on the screen.
In TELETEXT Mode: When a selected Teletext page has hidden subpages or timed pages, these pages can be seen in the following manner:



1 **Press** . The screen will show <<SUBPAGE: - - - - >>
2 **Enter** 4 digits corresponding to the subpage desired. E.g. 0021 for subpage number 21.
3 **Wait** until the page appears.

NOTE: You can use this button together with . This means that you can view the main TV picture until the subpage has been found. The on screen icon at the top left side of the screen will change when the subpage has been found.
Press to view the subpage.

CANCEL button:

Cancel the Teletext information and restores the TV picture. Indication is shown on the screen.
The TV programme cannot be changed, while in Teletext/Cancelled mode. When a change takes place in the Teletext information, the upper time of the cancelled page or some other indication of special pages is shown on screen.



To restore the teletext, **press** and the whole Teletext is shown.

NOTE: This button can be used together with while awaiting subpages.

Teletext Mode (Continued)

Teletext operation - LIST Mode -

How to Operate Page Memory

Your TV has 32 Teletext page number memories for fast recall of Teletext information.
Four Teletext page numbers can be stored in each position in programme positions 0 through 6; a total of 28 pages.
Only one programme with 4 page numbers can be stored in programme positions 7 through 99 . If you try to store more than 4 page numbers in a programme position between 7 and 99, the previously stored page numbers will be erased.

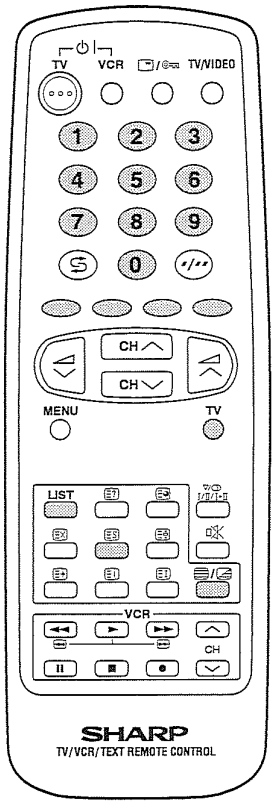

1. **Select** the programme channel number into which you want to store Teletext page numbers.
2. **Press** to select the TELETEXT Mode.
3. **Press** LIST to change from FLOF system to LIST Mode.
4. **Press** a coloured button corresponding to the coloured box on the screen for page number storage.
5. **Enter** the Teletext page number using the 0 ~ 9 digit buttons (enter three digits).
6. **Repeat** steps 4 and 5 until the numbers for the desired pages have been entered.
7. When you press for more than two seconds, the box changes white, and the settings are confirmed.
8. **Press** TV to return to TV Mode.

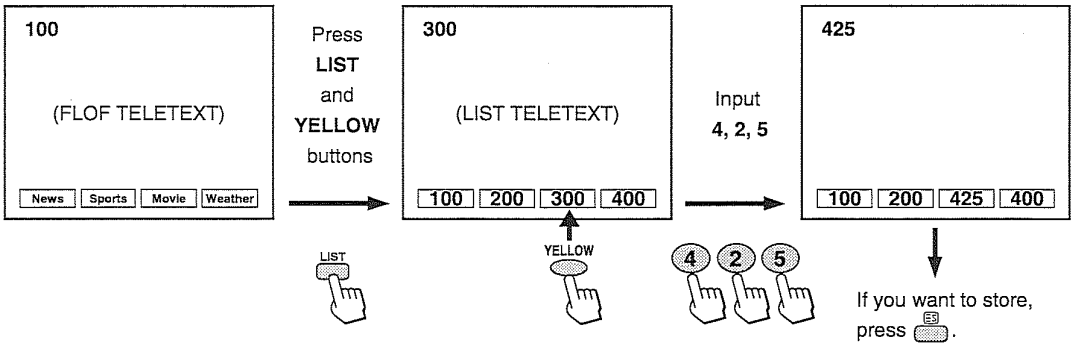

Page Selection - LIST Mode -

1. **Select** the appropriate programme channel.
2. **Press** to select the TELETEXT Mode.
3. **Press** LIST to change from FLOF system to LIST Mode.
4. To recall a page number displayed in the coloured brackets, simply **press** the corresponding coloured button.

Troubleshooting

Quick Service Check List / Problems	Try a new channel to check for possible station trouble	TV not plugged in Outlet power OFF	Main Power button of TV not ON	Antenna not connected to terminal at the back of the TV set	If outside antenna is used, check for broken wires	Check for local interference	Turn off using the Main Power button, then turn ON again after a minute	Adjust COLOUR control	Check batteries in the Remote Control	Try fine tuning to correct	Check if the Brightness or Contrast setting in the picture setting mode might be all the way to the minus side.	Increase the volume	Check that Child Lock is not activated
	Possible Causes/Solutions												
Remote control does not work		●	●				●		●				
Bars on screen					●	●							
Picture distorted	●				●					●			
Picture rolls vertically	●				●	●							
No colour	●			●	●			●		●			
Poor reception on some channels	●			●	●	●							
Picture weak	●			●	●			●		●			
Picture lines or streaks	●				●	●							
Picture ghosting	●			●	●	●							
Picture blurred	●				●					●			
Sound OK, picture poor	●			●	●	●		●		●	●		
Picture OK, sound poor	●					●						●	
No picture or sound	●	●	●	●	●		●				●	●	
It is not possible to tune the set													●

This unit is equipped with a microprocessor. Its performance could be adversely affected by external electrical noise or interference. If this should happen, unplug the unit and plug it in again after a few minutes.

Calling for Service

If the problem cannot be corrected by the use of this guide, remove the main plug from the wall socket, and contact the Dealer or Supplier from whom the unit was purchased in order to obtain service. Where this is not possible, please visit our web-site **www.sharp.co.uk/support**.
Customers without Internet access may telephone 08705 274277 [or (01) 676 0648 if telephoning from Ireland] during office hours.

Certain replacement parts and accessories may be obtained from our Main Parts Distributor, who can be contacted on the following numbers:

Willow Vale Electronics Ltd.
08706 000271 and 0161 205 7531

In the unlikely event of this equipment requiring repair during the guarantee period, you will need to provide proof of the date of purchase to the repairing company. Please keep your invoice or receipt, supplied at the time of purchasing.

Specifications

Model	**21HS-50H**
1. Receiving Broadcast Standard	CCIR TV Standard System PAL-I
2. Receiving System	Colour System: PAL Field Frequency: PAL 50/60 Hz Capability
3. Reception Channels	VHF: A - J CH UHF: E 21 - E 69 CH CATV: S1 - S20, S21 - S41 (Hyper)
4. Power Source	AC220V-240V, 50Hz
5. Power Consumption at 240V AC 50Hz	43 W
6. Power Consumption at Stand-by	3 W
7. Audio Output (MPO)	4 W × 2, Total 8 W
8. Dimensions (approx.)	Width: 504.0 mm Height: 468.5 mm Depth: 473.0 mm
9. Viewing Area (diagonal measurement)	54 cm (21")
10. Weight (approx.)	19.8 Kg
11. Internal Speaker	9 cm × 5 cm Oval × 2
12. Antenna Input Impedance	75 ohms Unbalanced
13. Safety	CE - MARK, BEAB
14. EMC	CE - MARK

Design and specifications are subject to change without notice.

Euro-SCART 21-Pin Terminal

For greater A/V enjoyment, various audio and video devices may be connected via the Euro-SCART 21-Pin Terminal.
For example, one can revel in the stunning visuals from a VCR and the dynamic sounds of an audio system. For your interest, here is just one example of an integrated A/V system.

21-Pin Euro-SCART

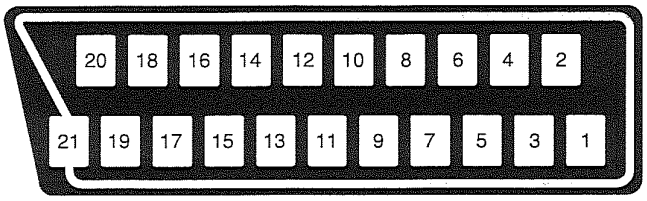

1. Audio right output
2. Audio right input
3. Audio left output
4. Common earth for audio
5. Earth for blue
6. Audio left input
7. Blue input
8. Audio-video control
9. Earth for green
10. Not used
11. Green input
12. Not used
13. Earth for red
14. Not used
15. Red input
16. Red/Green/Blue control
17. Earth for video
18. Earth for Red/Green/Blue control
19. Video output
20. Video input
21. Plug shield

SHARP

SHARP ELECTRONICA ESPAÑA, S.A.

SHARP ELECTRONICS (U.K.) LTD.

Sharp House, Thorp Road, Newton Health,
Manchester M40 5BE

PRINTED IN SPAIN
TINS-7133BMN0
08/01